

Wireless speaker

SPB-TOPPER

User manual



Features:

Compatible with A2DP, AVRCP

Hands-free

Three options for music playback: wireless BT, radio FM, card microSD

Operating distance: max. 10m

Uptime: about 5 hr

Charge time: 2 hr

Dimensions: 60 x 60 x 50mm

Weight: 250g

Technical details:

Speaker size:	Φ45mm
Output Power RMS (W):	3W
Impedance:	4 Ohm
Frequency response:	180Hz – 16KHz
Distortion	<5%
Battery capacity	520mAh
Battery voltage	5V
BT Version	V4.2
Protection index	IPx4

Package contents: TOPPER wireless speaker, user manual, miniUSB charging cable

Operating instructions

Bluetooth playback mode

1. Slide the OFF button to the right side, you will hear the message "the device already ready to connect" (the device is ready for Bluetooth connection).
2. Activate the Bluetooth function on the device from which you want to replay music (phone, tablet, etc.), look for the speaker in the device list and connect.
3. Press the PLAY/PAUSE button to play/pause music.
4. Adjust the volume or skip to next/previous track with the help of the PLAY/PAUSE button by sliding it to the right, respectively to the left.
5. Short press the button to answer or close phone calls. The built in microphone allows for phone calls in hands-free state. The speaker will resume music playback once the phone call is ended (if the audio source has not stopped or has exceeded Bluetooth range).

MicroSD playback mode

1. Turn on the speaker
2. Insert a microSD card (up to 32GB) in the dedicated port
3. During playback, press the Play/Pause button to play or stop the music
4. Slide the Play/Pause button to the right or left to increase or decrease the volume or change the desired track

AUX-IN Mode

1. Turn on the speaker by sliding the button to the right (MP3)

2. Use the charging cable with the JACK plug to connect the speaker to the device you want to play music from (PC, phone, TV, etc.).
3. Slide and hold the Play/Pause button to the right or left to adjust the volume.

FM radio mode

1. Turn on the speaker by sliding the OFF button to the right and insert the miniUSB cable as the antenna.
2. Long press the Play/Pause button until you hear "FM MODE".
3. Press and hold the Play/Pause button and slide it to the right to search and save radio stations.
4. Briefly slide the Play/Pause button to switch between FM channels.

True Wireless Stereo function:

1. Turn on two Topper speakers, both in Bluetooth mode.
 2. Turn off the Bluetooth function of the device you are playing music from and then, on one of the speakers, after about a minute you will hear a sound which confirms that speaker 1 will connect with speaker 2.
 3. Activate the Bluetooth function of the device from which you want to play music and connect it with speaker 1 that appears in the menu when scanning.
- The music will be played in both speakers at the same time.

Recharging the speaker

1. Turn off the speaker, insert the miniUSB charging cable into the charging port of the speaker and connect the other end of the cable to your PC or wall charger
2. The LED indicator will remain lit red during charging and will turn off once the speaker is fully charged

Precautions

Protect the product from moisture. Do not expose the product to rain or moisture-laden air. Protect the product from liquids. Protect the product from fire and heat sources. Do not place the product near fire or other heating sources (stoves, radiators, etc.)

Product disposal.

Do not throw the product or other electronic components together with household waste. Use only specialized centers for electronic waste collection.

Disposing of the product. Do not dispose of the product or other electronic components with your household waste. Use only specialized electronic waste collection centers.



WASTE DISPOSAL: The adjacent symbol indicates that your product and / or its battery must be disposed of separately from household waste in accordance with local laws and regulations. When this product reaches the end of its life, take it to a collection point designated by the local authorities. For information about the local collection centers, please contact the town hall of your locality or access the page www.ecotic.ro

Royal Computers declare under our own responsibility that the product conforms with the European directive 2014/53/EU.

The whole text of the EU declaration of conformity is available at the following internet address: www.spacer.ro

