



## Features

2 stereo satellites and subwoofer with amplifier, ensure a total sound power of 20 W

Dedicated buttons for bass control, treble and volume control conveniently placed on the subwoofer

BT wireless technology. Wireless music streaming thanks to BT technology

Music streaming via BT technology, USB port, AUX, radio FM


LCD display / front panel for audio control

Wireless remote control for your convenience.

Easy install: plug & play

## Product functions

1. FM Radio
2. Bluetooth – plays music wirelessly from Bluetooth devices
3. Supports USB memory sticks
4. microSD card slot
5. AUX-in port

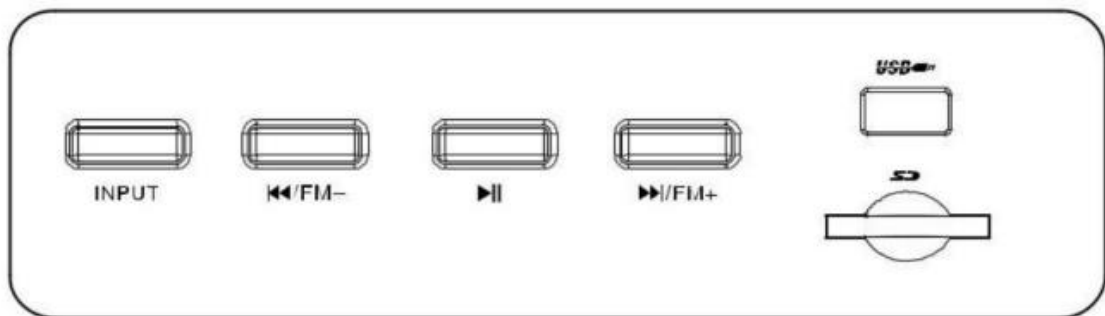

## Technical details:

- Output power: 20W (10W+5W\*2)
- Speaker unit: 4" (subwoofer)/ 2.5" (each satellite)
- S/Z ratio: >78Db
- Frequency: 150Hz-20KHz (satellites), 20Hz-150Hz (subwoofer)
- Range of action: 10m

- Power supply: mains AC220V 50Hz
- Distortion: 0.1% 1W 1KHz
- Volume, bass and treble control
- Dimensions: 305x150x260 mm (subwoofer)  
125x105x260 mm (satellite speaker x 2)

**Package contents:**

- Subwoofer and 2 satellites
- Wireless remote control
- User manual

**Bluetooth operating instructions**

1. First, change the "Bluetooth" input signal.
2. Second, switch your phone or other device with Bluetooth function to Bluetooth mode, then scan the device named "SPSK-21BT-TOKYO" and connect to it.
3. When playing Bluetooth music, through the button on the panel and the wireless remote control, you can control the last song in the phone/play/pause/next song.
4. When receiving a call while playing music from your mobile phone via Bluetooth, the signal from, Bluetooth will go into "mute" mode for the duration of the call.
5. When you switch to another mobile phone to play music via Bluetooth, press the Play/Pause button for 3 seconds, then disconnect from the previous phone. It remembers the last connected device.

**1. ENTRY**

Press and hold for 2 seconds to exit STANDBY mode. By pressing the INPUT key you can switch the input mode between the AUX/BLUETOOTH/FM options.

**2. NEXT/FM+**

a) When playing music from USB/SD/Bluetooth, press this button once to move to the next song.

b) When playing music from the FM radio, press this button once to change the frequency. Press for 2 seconds to automatically search for radio channels and then save

### **3. PLAY/PAUSE**

a) When playing music from USB/SD/Bluetooth, press this button once to play/pause.

b) When playing FM music, press this short button to start automatic channel search and then save. Press this button again to stop the automatic search.

### **4. FRONT/FM-**

a) When playing music via USB/SD/Bluetooth, press once to go to the previous song.


b) When playing music from the FM radio, press this button once to change the frequency.

## **SPECIFICATIONS**

1. OCL amplifier included, compatible with PC, VCD, CD, LD, Walkman and others.
2. Designed with a magnetic shield, so it can be used with TVs or computers;
3. Generates a larger dynamic range of low frequencies, a finer middle frequency and a purer and more harmonious high frequency;

## **Operations**

1. Please connect the sound and power sources according to the diagram;
2. When all units are connected correctly, turn on the power switch;
3. Open the sound sources, then adjust the volume knobs of different channels for a customized effect;
4. After use, please turn off the power switches;

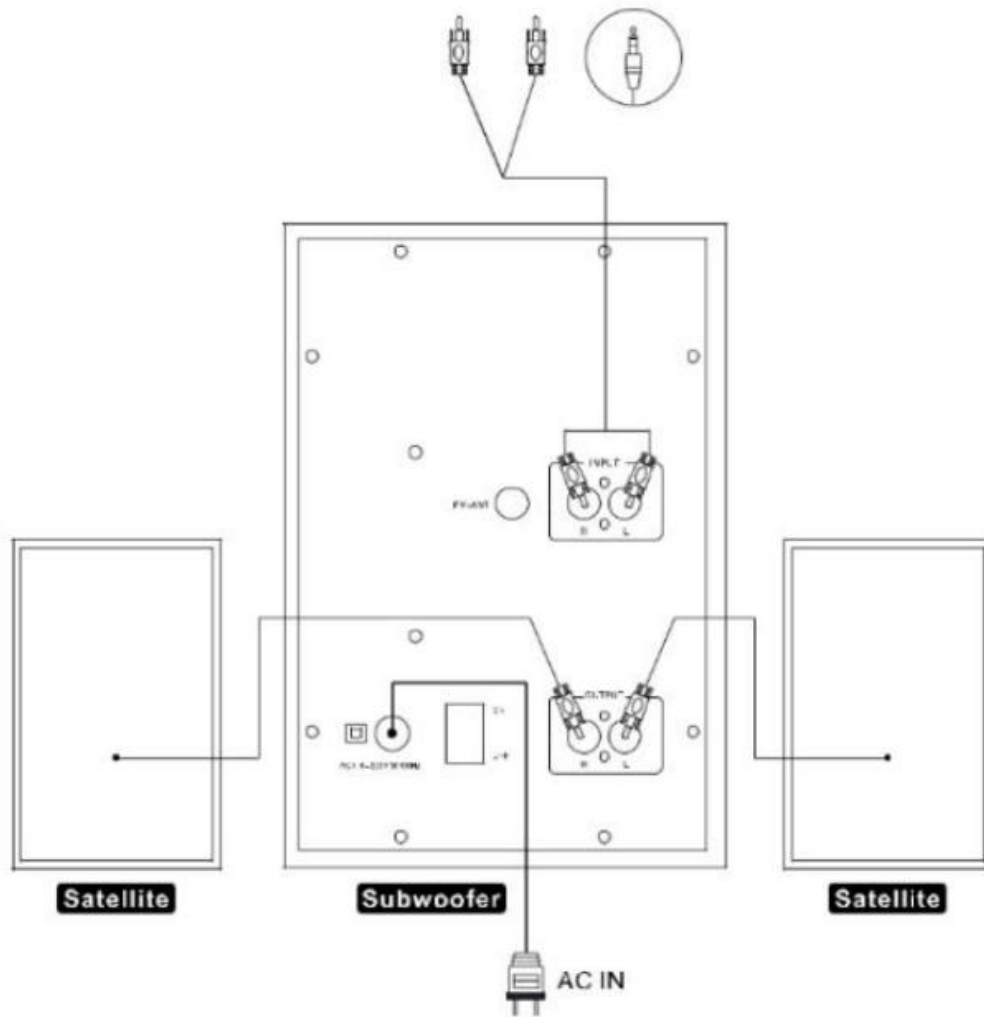

## WARNINGS

1. Please turn the volume knob to the minimum position before operation to prevent any damage to the speakers due to instantaneous impact;
2. Protect the product from moisture. Do not expose the product to rain or moisture-laden air. Protect the product from liquids.
3. Please do not open the back cover of the main speaker in case of electric shock or damage the warranty marks;
4. Cable protection. Do not damage the connection cable. Avoid pulling or twisting the cable where it joins the device
5. Protect the product from fire and heat sources. Do not place the product near fire or other heating sources (stoves, radiators, etc.)
6. Please turn off the power switch and remove the plug from the socket if you do not use the system for a long period of time.

**Disposing of the product.** Do not dispose of the product or other electronic components with your household waste. Use only specialized electronic waste collection centres.

**WASTE DISPOSAL:**



The adjacent symbol indicates that your product and / or its battery must be disposed of separately from household waste in accordance with local laws and regulations. When this product reaches the end of its life, take it to a collection point designated by the local authorities. For information about the local collection centres, please contact the town hall of your locality or access the page [www.ecotic.ro](http://www.ecotic.ro)

Royal Computers declare under our own responsibility that the product conforms with the European directive 2014/53/EU.

The whole text of the EU declaration of conformity is available at the following internet address: [www.spacer.ro](http://www.spacer.ro)

